

ACCESSORIES LIST



Projector



AC Adapter



AV Cable



Tripod



U Clip

HOW TO TURN ON THE DEVICE

1.Remove the projection lens cap at the front of the Micro Projector.



2.Plug in the AC power adapter.



3.Swith on the main power at the tailside.

4.To turn the power on, press and hold down [Play] for 3 seconds.
The Startup logo will appear after 3 seconds.



UNIT VIEW DESCRIPTION



1. Focus
2. Micro SD(TF) Card
3. Speaker



4. Controlling Keypad
5. Battery charge
6. Reset
7. Green: Power is available
/ Red: Battery isn't available
8. Volume
9. USB
10. +5DC
11. A/V
12. Earphone Output
13. Power Switch

Safety Advice



We strongly recommend that you observe the usage precautions laid out in this instruction. In no event will Nextar be liable for any indirect, incidental, special or consequential damages to any persons caused by Nextar's negligence, or for any lost profits, lost savings, loss of use, lost revenues or lost data arising from or relating to this device, even if Nextar has been advised of the possibility of such damages. In no event will Nextar's liability or damages to you or any other person ever exceed the amount paid by you for the device, regardless of the form of the claim. Some countries/states do not allow the limitations or exclusion of liability for incidental or consequential damages, so the above limitation or exclusion may not apply to you.